


 
 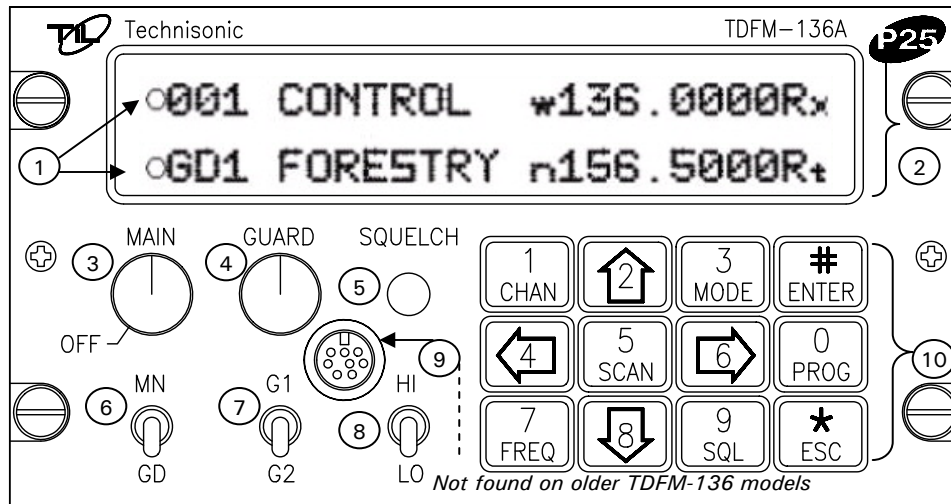



 

 
















 
 




 
 







 


 


















 


 




 





 
 




 
 







For Radio Firmware: 2.x.x



1. SQUELCH INDICATORS (LED) – Lights when signal received (Top: Main, Bottom: Guard).
2. CHANNEL DISPLAY (2 Line x 24 char) – Shows channel parameters (Top: Main, Bottom: Guard).
3. MAIN (Rotary + Switch) – Power ON/OFF and Main channel volume control.
4. GUARD (Rotary) – Guard channel volume control.
5. SQUELCH DEFEAT (Push button) – Press to open squelch (in analog modes of operation).
6. MN/GD (Toggle Switch) – Selects active channel (Main or Guard) for transmit and edit functions.
7. G1/G2 (Toggle Switch) – Selects active Guard memory (G1 or G2) for transmit and edit functions.
8. HI/LO (Toggle Switch) – Selects Transmit Power: High (10w) or Low (1w).
9. KEYLOADER - PTT keying is provided via the back connector, and is part of a correctly installed system.
10. KEYPAD (12 Keys) – Control radio functions, 3 command levels as follows:

| Command/Operator Level 1: Press the 'Cmd' key ... |                     |  |         |       |
|---|---------------------|--|---------|-------|
| Cmd   | Function            | Edit Keys  | OK      | Exit  |
| 1 CHAN  | SELECT MEMORY       | 0 PROG TO 9 SQL ENTER CHANNEL MEMORY (001 to 230)  | # ENTER | * ESC |
| 2   | DISPLAY BRIGHTER    |  |         |       |
| 3 MODE  | EDIT OPERATING MODE | 3 MODE 2 STEP UP/DOWN THROUGH OPERATING MODES  | # ENTER | * ESC |
| 4   | SCROLL MEMORY DOWN  | SCROLL DOWN THROUGH THE PROGRAMMED MEMORY POSITIONS  |         |       |
| 5 SCAN  | SCAN ON/OFF         | 5 SCAN OR * ESC STOP SCAN  |         |       |
| 6   | SCROLL MEMORY UP    | SCROLL UP THROUGH THE PROGRAMMED MEMORY POSITIONS  |         |       |
| 7 FREQ  | EDIT FREQUENCY      | 0 PROG TO 9 SQL SELECT FREQUENCY THEN # ENTER Tx FOLLOWS Rx.   | # ENTER | * ESC |
| 8   | DISPLAY DIMMER      |  |         |       |
| 9 SQL   | EDIT SQUELCH MODE   | 9 SQL 2 8 STEP UP/DOWN THROUGH SQUELCH MODES. Tx FOLLOWS Rx.   | # ENTER | * ESC |
|   | EDIT SQUELCH VALUE  | 2 8 STEP UP/ DOWN THROUGH: TONES, CODES, TG & NAC HEX<br>0 PROG TO 9 SQL DECIMAL EDIT FOR NOISE SQL VALUE (00 TO 15) | # ENTER | * ESC |
| 0 PROG  | GO TO NEXT LEVEL    | GO TO THE NEXT HIGHER COMMAND LEVEL  |         |       |
| # ENTER   | n/u                 |  |         |       |
| * ESC   | n/u                 |  |         |       |

| Command/Operator Level 2: Press  + the 'Cmnd' key ... |                       |  |   |   |
|--|-----------------------|--|---|---|
| Cmnd   | Function              | Edit Keys  | OK  | Exit  |
|   | CREATE/EDIT CHANNEL   |  TO  SELECT CHANNEL MEMORY TO EDIT<br>THEN EDIT: SCAN LIST (L2-5), TEXT DESCRIPTION (L2-6)<br>OPERATING MODE (L1-3), FREQUENCY (L1-7), & SQUELCH (L1-9)  |  |  |
|   | COPY GUARD TO MAIN    | COPY CHANNEL PARAMETERS FROM GUARD TO MAIN (default disabled)  |   |   |
|   | LOCK KEYPAD           |  UNLOCK KEYPAD  |   |   |
|   | n/u                   |  |   |   |
|   | EDIT SCAN LISTS       |    STEP UP/DOWN THROUGH AVAILABLE SCAN LISTS<br> TOGGLE ENABLE/DISABLE FOR SCAN (BAR OVER DIGIT = DISABLED)  |  |  |
|   | EDIT TEXT DESCRIPTION |  STEP THROUGH CHARACTER GROUPS (A, a, 0, BLANK)<br>  STEP/SCROLL UP/DN THROUGH CHARACTERS IN SELECTED GROUP<br>  MOVE CURSOR FORWARD/BACKWARD |  |  |
|   | CREATE SHADOW         |  TO  SELECT CHANNEL MEMORY TO EDIT<br>THEN EDIT: TEXT (L2-6), MODE (L1-4), SQUELCH (L1-9)  |  |  |
|   | COPY MAIN TO GUARD    | COPY CHANNEL PARAMETERS FROM MAIN TO GUARD (default disabled)  |   |   |
|   | SET UNIT ID           |  TO  UNIT ID VALUE FROM: 0 TO 9999999  |  |  |
|   | GO TO NEXT LEVEL      | GO TO THE NEXT HIGHER COMMAND LEVEL  |   |   |
|   | n/u                   |  |   |   |
|    | GO TO PREVIOUS LEVEL  | GO TO THE PREVIOUS COMMAND LEVEL   |   |   |

| Command/Operator Level 3: Press  +  'Cmnd' key ... |                       |  |   |   |
|--|-----------------------|--|---|---|
| Cmnd   | Function              | Edit Keys  | OK  | Exit  |
|   | SET BOOT CHANNEL      |    STEP UP/DOWN THROUGH BOOT MEMORY OPTIONS   |  |  |
|   | n/u                   |  |   |   |
|   | SET NUMERIC EDIT MODE |    TOGGLE HEX/DECIMAL EDIT MODE (FOR T.G & NAC)   |  |  |
|   | DISPLAY FIRMWARE REV. |    TOGGLE MAIN/BOOT FIRMWARE RELEASE INFORMATION  |  |  |
|   | SET SCAN PARAMETERS   |    SELECT REVERT MODE<br>THEN  TO  SET TIMERS (REPLY, MONITOR, DELAY) |  |  |
|   | SET PTT TIMER         |    STEP UP/DOWN THROUGH TIMER VALUES (30, 60, 90 SEC)   |  |  |
|   | SET SIDETONE AUDIO    |  TO  SET SIDETONE LEVEL (00 TO 85)   |  |  |
|   | PC COMMUNICATION      | MUST BE CONNECTED TO A PC RUNNING TDP-136 SOFTWARE   |   |  |
|   | SHOW SQUELCH VALUES   |    TOGGLE Rx/Tx SQUELCH PARAMETER DISPLAY   |  |  |
|   | n/u                   |  |   |   |
|   | n/u                   |  |   |   |
|   | GO TO PREVIOUS LEVEL  | GO TO THE PREVIOUS COMMAND LEVEL   |   |   |

**NOTES:**

- The channel being edited is determined by the position of the front panel switches MN/GD and G1/G2.
- Current command level is shown at 4<sup>th</sup> character on bottom row.
- Levels 2&3 are time limited, the unit will return to level 1 if no activity in 5 seconds.