

L-Tronics DF Pre-Flight Checklist



1. Aircraft Master Power – On
2. Avionics Master Power – On
3. DF Power – On (Volume knob)
4. Freq – 121.5
5. Alarm Toggle – Off
6. Sensitivity – Maximum (full clockwise)
7. Volume – Up until “hissing sound” heard
8. Strength Needle – Should show 1/3 Scale
9. DF Needle – Centered
10. Sensitivity – Minimum (full counter clockwise)
11. Sound – “Hissing sound” decreases
12. Strength Needle – Left edge of scale
13. DF Needle – Wobbles and centers
14. Sensitivity – Maximum
15. DF Needle – Wobbles and centers
16. Volume – Minimum
17. Alarm Toggle – On
18. Alarm Light – Will flash momentarily

ELT Missions

1. Freq – 121.5 or 243
2. Sensitivity – Maximum
3. Volume – Mid Scale
4. Alarm toggle - Off

ELT Training Missions

1. Freq – 121.775
2. Sensitivity/Volume/Alarm – Same as ELT mission